

- 3 or 5 minutes fixed, 10 minutes adjustable
- Works with anticipator type thermostats

APS**MODE OF OPERATION**

Upon initial thermostat closure, the load is energized. When the thermostat opens or there is a loss of power, the load is de-energized and the delay period begins. The compressor will not start again during the delay period.

SPECIFICATIONS**Input**

- **Voltage:** 18-240 VAC
- **Frequency:** 50-60 Hz

Output

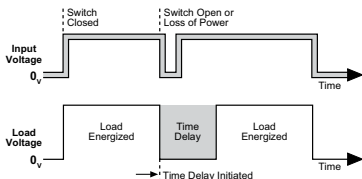
- **Output Ratings:**
 - **Maximum:** 1 amp
 - **Minimum:** 40 mA
 - **Inrush:** 10 amps

Time Delay

- **Fixed:** 3 or 5 minutes
- **Adjustable:** 10 minutes

INSTALLATION

1. Disconnect power.
2. Connect terminals as shown in the wiring diagram below.
3. Select the desired time delay (adjustable models only).
4. Reapply power, check operation.

TIMING DIAGRAM**WIRING DIAGRAM**